

尺寸：105x148mm 双面三折页黑白印刷

ATALAX™

Wireless Speaker

Outdoor Active HI-FI Wireless Speaker

ATALAX BEANO WIRELESS SPEAKER



For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by fault or oversight of this manual

FEATURES:

- A) 1.1CH outdoor innovation Bazooka speaker.
- B) Wireless Audio Streaming for Wireless Freedom.
- C) With RGB light.
- D) Output perfect sound performance.
- F) With USB & Micro SD support, FM radio.
- G) 3.5mm Stereo Analog Input to Connect any Audio Source.
- H) With karaoke function, 1 microphone input.
- I) Built in lithium rechargeable battery 1800mAh.
- J) Designed for Portability with Handle.


ACCESSORIES:

Charging cable, Audio cable, User manual.

SPECIFICATION:

Wireless range up to 10 meters
 Speakers: Horn Size: 1.4 inch,
 Subwoofer Size: 4-inch, Horn output: 1.5W, 4Q, Subwoofer output: 10.8W,4Q
 Connections: Flash Drive and Micro SD card(reader) Aux-in 3.5mm jack connection
 Power supply: Built-in rechargeable lithium battery 1800mAh
 Play time: Two hours with max volume
 Recharge power: DC 5V 1A (USB-to-micro USB charging cable included)
 Product size: 376*173*186mm

INSTRUCTION FOR APPEARANCE AND KEY:

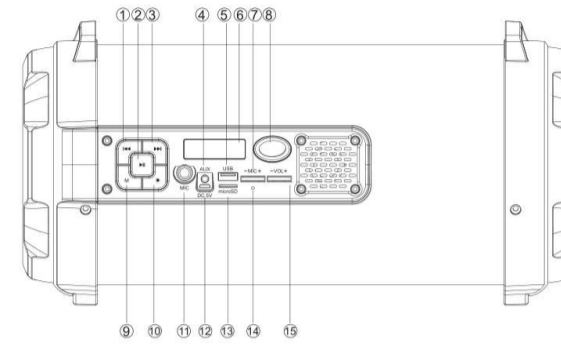

- 1) PREVIOUS SONG
- 2) PAUSE/PLAY
- 3) NEXT SONG
- 4) AUX-in Jack
- 5) USB port
- 6) DIGITAL DISPLAY
- 7) WIRED MIC VOLUME
- 8) POWER ON/OFF
- 9) MODE (Switch Wireless, USB disk, Micro SD, FM and AUX-IN state)
- 10) RGB LIGHT
- 11) WIRED MIC INPUT
- 12) DC 5V INPUT
- 13) MICRO SD
- 14) CHARGING INDICATOR
- 15) VOLUME CONTROL

CONNECTIVITY

WIRELESS:

- 1) Turn the power button to "ON", The digital will show "bt" and beep twice.
- 2) Then the RGB light on both sides automatically start;
- 3) Short press "RGB LIGHT" button, to enjoy different light changing circle;
- 4) Long press "RGB LIGHT" button to turn off the light in any modes;
- 5) Short press "RGB LIGHT" button to turn on the RGB light again.
- 6) 2. Activate wireless of mobile phone and search for device name "BEANO" then connect it. The speaker will beep three times once connected successfully.
- 7) 3. Play the music from your mobile phone and enjoy.
- 8) 4. Short press "PREVIOUS SONG" or "NEXT SONG" buttons on the speaker or on Mobile phones to select songs you like.
- 9) 5. Press "PAUSE/PLAY" buttons on the speaker or on Mobile phones to play/stop the music
- 10) 6. Sliding "VOLUME CONTROL" button to adjust volume up and down. Or adjust volume on your mobile phones'.

FLASH DRIVE & MICRO SD CARD

- 1) Turn the Power button to "ON".
- 2) Insert Micro SD card or USB flash disk into slot, the music stored will be played automatically.
- 3) Under playing mode, short press "PREVIOUS SONG" or "NEXT SONG" buttons to select songs you like, long press to fast forward or backward the song.
- 4) Press "PAUSE/PLAY" buttons to play or pause.
- 5) Please turn the Power button to "OFF" while without use.
- 6) Remark: Under Wireless playing mode, insert Micro SD or USB will disconnect the Wireless and switch the playing to USB or Micro SD card. Press the "MODE" button to switch back to Wireless mode again.

FM RADIO:

- 1) Under FM radio state, the audio cable provided treat as antenna. Please insert the audio cable to get the best FM signal before using.
- 2) Turn the power button to "ON", press the "MODE" button to switch to FM radio state.
- 3) Under playing mode, short press "PAUSE/PLAY" buttons to auto search the FM Channel and store it automatically.
- 4) Press "PREVIOUS SONG" or "NEXT SONG" buttons to change the stored FM channel.

AUX-IN:

- 1) For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "AUX-in Jack" of this device.
- 2) Then press the "MODE" button to switch to AUX-IN state.
- 3) When using an external device, all functions will be controlled by the external device.

MICROPHONE:

- 1) This product with a wired Microphone input, just plug the 6.5MM microphone into the Mic input spot, it will be ready for use.

RECOMMENDATION:

- A. Press the "MODE" button to switch the different modes, the order is Wireless, USB disk, Micro SD, FM radio and AUX-IN.
- B. Turn the power button to "OFF" to cut off the power supply while without use.

HOW TO CHARGE:

- 1) The charger is not included in the accessories. Please use the universal 5V/1A charger to charge this device. Put the provided charge cable into the charging jack, connect the other end to the charger, the charging indicator will keep lighting.

- 2) (When playing music during charging, please put the volume to middle, because for some music with heavy bass, the charger may cannot afford the high current temporarily under the maximum volume)
- 3) 2. Charge time should be 3-5 hours. When charging full, the indicator light will switch off.