

尺寸: 105x148mm

ATALAX[®]

Wireless Speaker

Outdoor Active HIFI Wireless Speaker

Wireless Speaker SAPPHIRE MINI



For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by fault or oversight of this manual.

FEATURES:

1.0 Outdoor HIFI wireless Speaker;
Output very clear sound and dynamic sound effect;
With A2DP wireless stream music from any wireless-enabled device such as your mobile phone, notebook, iPhone or iPad;
Secure simple pairing for user-friendly operating;
10 meters operating range;
With USB and Micro SD supporting;
With Line-in function, suitable for PC, MID, TV and other audio device;
Built-in lithium rechargeable battery 1500mAh;


ACCESSORIES:

Charging cable, Audio cable, User manual, Lanyard

SPECIFICATION:

wireless range up to 10 meters
Speakers: Horn Size: 2 inch
Horn output: 3W/4Ω
Connections: USB disk & Micro SD card
Aux-in 3.5mm jack connection
Power supply: Built-in rechargeable lithium battery 1500mAh
Play time: 3 hours with max volume
Recharge power: DC 5V 1A (USB-to-micro USB charging cable included)
Product size: 79.3(W)*86.3(H)*201.3(L)MM

INSTRUCTION FOR APPEARANCE AND KEY:

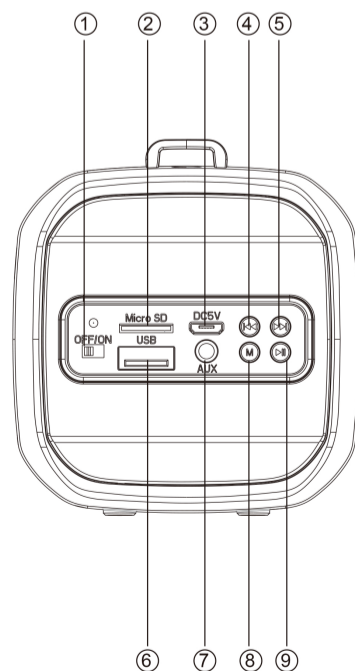

1. ON/OFF button
2. Micro SD slot
3. Charging jack
4. Previous/Volume down
5. Next/Volume up
6. USB port
7. Aux-in jack
8. Mode (Switch Wireless, USB disk, Micro SD, FM and AUX-IN state)
9. Play/Pause

Wireless connection:

1. Turn the power button to "ON", The LED light turn blue and twinkle quickly and beep twice
2. Activate wireless of mobile phone and search for device name "SAPPHIRE MINI" then connect it. The blue LED light twinkle slowly and and beep three times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press Forward or Backward button on the devices or on Mobile phones to select songs you like.
5. Press Play/Pause button on the devices or on Mobile phones to play/pause the music.
6. Use the wireless device to adjust volume up and down. Or long press to Forward or Backward button to adjust volume up and down.

Playing music from USB disk and Micro SD card:

1. Turn the Power button to "ON".
2. Insert USB flash disk or Micro SD card into slot, the music stored will be played automatically and blue LED light always keep lighting.
3. Under playing mode, short press Forward or Backward button to select songs you like, Or long press to Forward or Backward button to adjust volume up and down.
4. Play/Pause to play or pause.
5. Please turn the Power button to "OFF" while without use.

Remark: Under wireless playing mode, insert USB disk or Micro SD card will disconnect the wireless and switch the playing from USB disk or Micro SD card. You can press the MODE button to switch to wireless mode again.

How to Use FM Radio:

1. Under FM radio state, the audio cable provided treat as antenna. Please Insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "Mode" button to switch to FM radio state.
3. Under playing mode, short press "Play/Pause" button to auto search the FM Channel and store it automatically.
4. Press Forward or Backward button to change the stored FM channel.

AUX-IN

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this devices. Then press the "Mode" button to switch to AUX-IN state. Enjoy...

When using an external device, all functions can be controlled by the external device.

Battery Charging:

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output, the red charging indicator keep lighting.
2. Charge time should be 4-5 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

Note:

1. The unit will operate without the wire connection using the lithium battery. The amount of battery life depends on how hard the unit is working. Heavy, loud, bass music will use more energy to produce than spoken word.
2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in the fire.
3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.